



Excentrické pouzdro

Pro nastavení průměru / Nastavení výšky středu

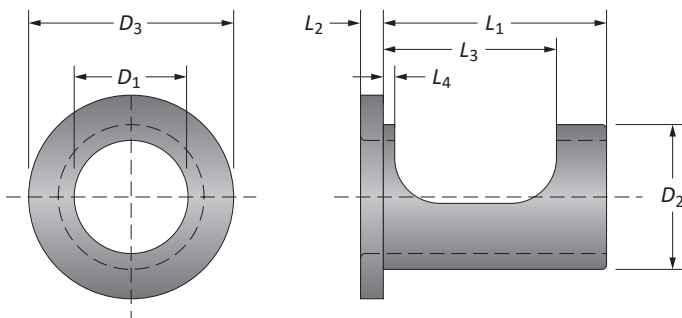


Rozměry nastavovací pomůcky							Rozsah nastavení			
	D_1	D_2	D_3	L_2	L_3	L_4	L_1	Obj. kód	Průměr*	Výška středu
m	25.00	32.00	49.00	6.00	39.00	2.50	54.00	SLEEVE-25FM	+0.40 to -0.20	+0.20 to -0.15
	32.00	40.00	58.00	6.00	43.00	2.50	59.00	SLEEVE-32FM	+0.40 to -0.20	+0.20 to -0.15
	40.00	50.00	74.00	6.00	49.00	3.00	69.00	SLEEVE-40FM	+0.40 to -0.20	+0.20 to -0.20
i	0.750	1.000	1.614	0.157	1.539	0.118	1.837	SLEEVE-075F	+0.0157 to -0.0079	+0.0079 to -0.0059
	1.000	1.250	1.929	0.236	1.539	0.098	1.995	SLEEVE-100F	+0.0157 to -0.0079	+0.0079 to -0.0059
	1.250	1.500	2.283	0.236	1.693	0.098	2.087	SLEEVE-125F	+0.0157 to -0.0079	+0.0079 to -0.0059
	1.500	2.000	2.913	0.236	1.929	0.118	2.481	SLEEVE-150F	+0.0236 to -0.0079	+0.0079 to -0.0079

* Rozsah nastavení průměrů se vztahuje k průměru otvoru

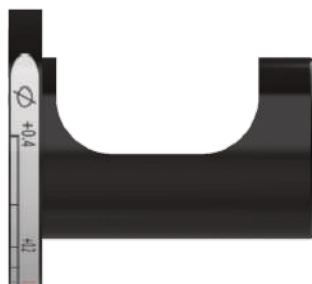

Frézování
Nastavení na obvodu

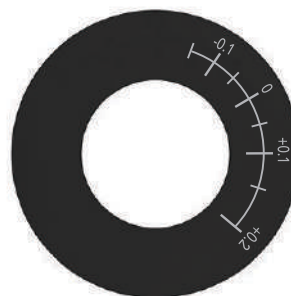

Soustružení
Nastavení na čele

m = Metrické (mm)
i = Palcové (in)